



Duct Mounted Toilet and Bathroom Fans Installation and Maintenance

Horizontal

Airflow



nuaire

Introduction

The Genie-M range of duct mounted fans has been specifically designed to serve small rooms such as toilet, bathroom and cloakrooms.

The fan is to be mounted in ductwork and is suitable for location inside or outside the area served. IOOmm inlet and outlet spigots are fitted for connection to suitable ductwork and a I.5mtr length of electrical lead is included so as to ease the electrical installation.

Units available are:

GENIE-M Standard unit

GENIE-MS With integral run on timer GENIE-MX Two speed fan, trickle and boost.

Installation


accordance with good industry practice and should conform to all

Mechanical installation

Having installed the associated ductwork and the electrical supply, prepare a non-reverberant mounting position for the fan. Offer the universal-mounting bracket to the white coloured half of the unit with the three self tapping screws provided, this half of the case contains the fan assembly and from where the electrical connection exits the case.

Connect the ductwork and secure the bracket to the prepared surface.

Figure 2. Horizontal and vertical airflow.

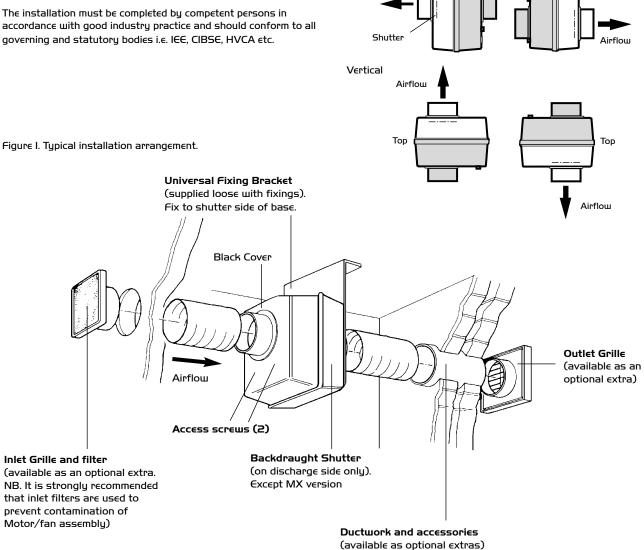

IMPORTANT

Isolation - Before commencing work make sure that the unit is electrically isolated from the mains and switched live supply.

Electrical installation

All units are supplied with a I.5Mtre length of cable connected to the fan, to ease installation without having to part the case and to facilitate connection to a fixed electrical supply, via appropriate switched/fused spur.

Wiring details

Wire coding: Live = L, Neutral = N, Switched live = 2, Earth = 🚖


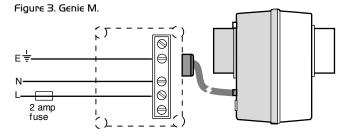


Figure 4. Genie MS and Genie MX. Via. remote switch.

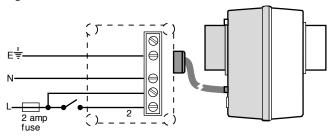


Setting to work

Upon completion of installation switch the mains supply on.

The GENIE-M will run continuously when 230V is presented to the brown wire.

Figure 5. Adjusting the overrun time (only the Genie-MS).

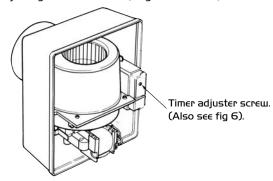


Run-on timer

When installing a unit with run-on timer the adjuster should initially be turned fully anti-clockwise. (This equates to a run-on of approximately 5 minutes).

Isolate unit from supply and remove front cover. Locate the electronic control module situated to the right of the fan/motor assembly.

Using a small screwdriver, turn the adjuster to the fully anti-clockwise position. Adjustment to the timer can subsequently be made to suit individual preferences. Turn timer clockwise to increase run on time - maximum run on time is 30 mins.

Figure 6. Run-on timer.

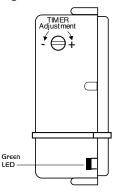

The Genie-MS will activate only when 230V is presented to the brown wire and 230V is presented to the black wire (Via light switch, door switch).

The Genie-MX will activate only on trickle speed when 230V is pre sented to the brown wire but will boost to high speed when 230V is additionally presented to the black wire (via light switch, door switch).

Maintenance

General

Dust, fluff etc. if allowed to build up on the motor and impellers will effect the efficiency of the fan, shortening the working life and, in severe cases lead to overheating of the motors. It is therefore strongly recommended that all units are fitted with inlet filters at the grilles to prevent contamination, the unit should also be inspected and cleaned at least every six months.

Procedure

Before carrying out any work, isolate the unit from the mains supply.

At all times take care not to damage, distort or disturb the balance of the impeller. Remove the electronic control module. Spring aside the two clips and remove the fan module Inspect and replace any damaged items.

Using a soft brush or dry cloth remove dust and dirt from the fan module. Wash cover in warm soapy water and dry thoroughly. Re-fit fan and electronic control module, replace front cover and secure with screws. Wash grille filter in tepid water to which a little mild detergent has been added. Shake out excess water and allow to dry naturally. Replace filter.

Telephone 02920 858 400

Replacement of Parts

Should any component need replacing Nuaire keep extensive stocks for quick delivery. Ensure that the unit is electrically isolated, before carrying out any work.

When ordering spare parts, please quote the serial number of the unit and the ARC number of the purchase if possible. (This information will be available on the fan label).

Warrantu

The 5 year warranty starts from the day of delivery and includes parts and labour for the first year.

The remaining period covers replacement parts only. This warranty is void if the equipment is modified without authorisation, is incorrectly applied, misused, disassembled, or not installed, commissioned and maintained in accordance with the details contained in this manual and general good practice.

The product warranty applies to the UK mainland and in accordance with Clause I4 of our Conditions of Sale. Customers purchasing from outside of the UK should contact Nuaire International Sales office for further details.

After Sales Enquiries

For technical assistance or further product information, please contact the After Sales Department.

Technical or commercial considerations may, from time to time, make it necessary to alter the design, performance and dimensions of equipment and the right is reserved to make such changes without prior notice.