



## Genie-DC and DCE I2V and 230V

## Universal Surface Mounted Fans Installation and Maintenance



## I.O Genie-DC and DCE fans

Genie-DC and DCE are part of our established Genie range but with low watt DC motors to save energy. The Genie range of fans has been specifically designed to ventilate small rooms such as kitchens, toilets, bathrooms, cloakrooms and similar and can be surface or recessed mounted.

\* An optional window mounting kit is available for this unit, code ref: WINKIT

Air entering the unit passes through a washable filter fitted to the front cover. Anti-backdraught shutters, retained in the closed position when fan is not running, are fitted to the base plate (S and H models onlu).

Motor has sealed, ball bearings and locked rotor protection. All units are fitted with high efficiency I2V DC motors. The fan/ motor assembly is retained by spring clips to simplify maintenance. Interchangeable plug in electronic control modules can incorporate:

- Run-on timer
- Humidistat
- Continuous low duty with boost.

Genie units are supplied with a finishing frame for use in semi-recessed applications.

Warning: when installing Genie units for remote switching it is important that the pull cord (if fitted) is removed. It is recommended that the unit is switched off (by the pull cord) before cutting. Cut the pull cord inside the unit a little way beyond the control module.

### I.I Coding

230V unit	I2V unit	Descr iption
GENIE-DC-S	GENIE-DC-SP	With integral run-on timer, operated by remote switch* only.
GENIE-DC-H	GENIE-DC-HI2	With integral humidistat, operated by pull cord or remote switch*
GENIE-DC-X	GENIE-DC-XI2	Continuous low duty with boost facility operated by pull cord or remote switch*
GENIE-DC-XH	GENIE-DC-XHI2	Continuous low duty with boost facility via internal humidistat operated by pull cord
GENIE-DCE GENIE-DCE-H	GENIE-DCE-I2 GENIE-DCE-HI2	See 1.2 See 1.2

<sup>\*</sup>light switch or similar or remote switch (by others).

WINKIT = Optional window mounting kit.

## 1.2 GENIE-DCE

This model is designed to operate in accordance with the requirements of building regulations 2000 Part F Means of Ventilation, System 3. (2010 Edition).

They are designed to operate continuously at a low ventilation level.

Sanitary accommodation is not required to be fitted with a fan if it contains an openable window. For set up instructions please refer

The Genie-DCE units are SAP appendix Q listed. Please refer to шшш.sap-appendixq.org.uk for further details.

#### **IMPORTANT**

System 3 – Continuous mechanical extract (MEV) requires that fans be fitted in the kitchen and all other wet rooms (bathroom, utility room, en-suite bathroom).

#### 2.0 Fan Installation

To be carried out by qualified personnel only.

## 2.I Surface Mounting

Note. It is assumed that a solid mounting position has been select ed and passages for ductwork from the outlet spigot, as well as electrical connection prepared. In addition that compatible ductwork has been installed.

Figure I. Surface mounted, wall. NB. Base drill pattern

superimposed on page 6.


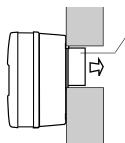


Figure 2. Remove cover. Press tabs to release cover.

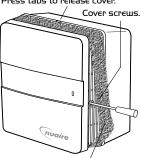

Easy stretch fit removable filter.

- NB. The discharge spigot is 98mm od. The hole in the structure should therefore be of a dimension to accomodate anu ducting or cavity lining used.
- I. Remove cover/grille assembly by removing cover screws. Depress the top/bottom retaining tabs. (Fig. 2).
- 2. Unplug the wiring connector (Fig 4a) from the electronic control module, then remove the electronic control module. (Fig. 3).
- 3. Remove the fan/motor assembly by pulling aside the two spring clips (see Fig. 3).
- 4. Place the unit in the mounting position, connect the ductwork and feed the cable through the cable entry. Connect the wiring to the terminal block (it may be easier to temporarily remove the block to facilitate wiring).
- 5. Drill and plug the mounting surface if necessary and secure the unit in position, using three No. 6 wood screws.
- 6. Re-fit the fan assembly to the case, securing it with the two spring

clips. Install the electronic control module (Fig. 3) ensuring that it is fully engaged in the internal socket then insert the plug-in wiring connector into the electronic control module (Fig 4a). If the pull-cord option is required it should be fed through the aperture on the impeller housing before sliding the control module into place. (see Fig 4b). If the pullcord option is not required it must be removed. Replace the front cover.

- 7. Ensure two cover screws are fitted.
- 8. Fit the filter which is a push fit between the front cover and the body of the unit (see Fig. 2).
- 9. Test run the unit noting that if a timer/humidistat option is fitted, the unit may run-on for the duration of the control sequence.

#### IMPORTANT

Isolation - Before commencing work make sure that the unit is electrically isolated from the mains and switched live supply.

## 2.I Surface Mounting cont.

Figure 3. Unit components.

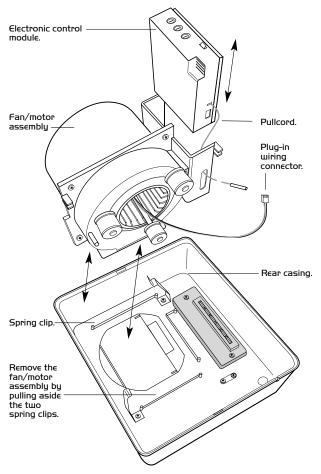


Figure 4a. Plug-in wiring connector fits into the electronic control module.


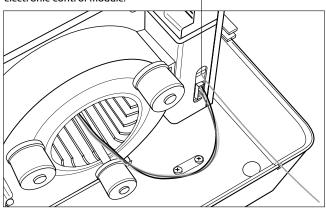


Figure 4b. The pull-cord should be fed through the aperture on the impeller housing if required.

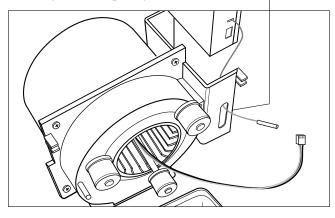

## 2.2 Semi-Recessed Mounting

Note: Remove the shutters from the spigot  $\overline{if}$  you are mounting the Genie in the ceiling.

Figure 5. Semi-recessed mounted, ceiling. First cut an aperture for the fan in the ceiling, cut and fit (A) timber supports (not supplied) and fit fan as shown.



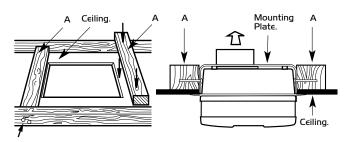


Figure 6. Semi-recessed mounted, wall.

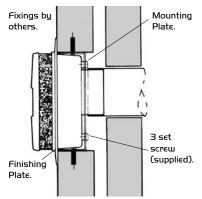

I. Prepare an opening I84mm x 213mm. This will allow sufficient clearance (approx. 5 to IOmm) all around the unit to accept the fixing bracket (optional). Note. Do not exceed these dimensions, as an aperture larger than 208mm x 238mm will not be covered by the finishing plate.

It is assumed that a solid, non-reverberant mounting position has been selected and the necessary compatible ductwork is already installed.

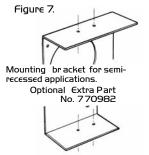

2. Position the mounting bracket (Fig.7) in the previously prepared aperture so that the ends of the bracket are flush with the surface of the wall. Secure the bracket with suitable fixings (by others) see Fig. 5.

Note: Fit finishing plate to fan before securing to bracket.

Note: the remaining installation procedures for Semi-Recessed Mounting are as Surface Mounting description.

#### IMPORTANT

"Warning: For EMC compliance the I2V cable should not be fitted within 50mm of 230V or other cables or on the same tray/trunking if made of metal. The earth connection in the transformer enclosure should not be used. No earth connection should be made to the I2V fan unit."

## 2.3 Window Mounting

WINKIT Parts checklist

The WINKIT contains the following parts. Make sure you have all the parts present before commencing installation.

loff	Outer Shutter frame a	ssembly Oll372 and	040547
loff	Outer gasket	540846	
loff	Inner gasket	540845	
3 off	5mm spacers	050149	
3 off	M4 x I2 Screws	680268	
3 off	M4 x 20 Screws	680087	
3 off	M4 x 30 Screws	680264	
3 off	M4 x 40 Screws	680265	

**I.** Employ a qualified glazier to cut a hole I25mm dia in the glass or, alternatively, replace your window with new glass incorporating a precut hole (Fig. 9).

2. The outer assembly consists a four bladed outlet shutter complete with clamping plate and an outer rubber gasket moulding. The gasket incorporates a moulded spigot which is designed to locate inside the I25mm dia hole in the glass.


Pop-out the top three plastic shutter blades from the frame and retain for replacement later. Position the assembly on the outside of the glass. If only one person is installing the fan it may be helpful to tape the assembly to the outside glass at this stage during installation as all fixings and assembly are completed from inside

- **3.** Working from inside the room with the inner gasket and unit casing. Run suitable cable through the inner gasket (Holes are provided top and bottom). Feed the cable through the access hole in the back of the case. Allow approximately I50mm of cable to protrude into the case (See Fig.8). Position this inner gasket and case assembly over the hole in the glass and locate the inner gasket moulded spigot in the aperture.
- **4.** Select appropriate screws and spacers from the four sets of screws and three spacers supplied for mounting into different thicknesses of glass, see table below.

Table IGlass/Screw selection

Window thickness	Screw size	
4mm - 6mm	M4 x I2	
7mm - Ilmm	M4 x 20	
12mm - 16mm	M4 x 30 + spacer	
17mm -21mm	M4 x 30	
22mm - 26mm	M4 x 40 + spacer	
27mm - 32mm	M4 x 40	

Should the screws foul on the back of the shutters during installation replace with the next size down.

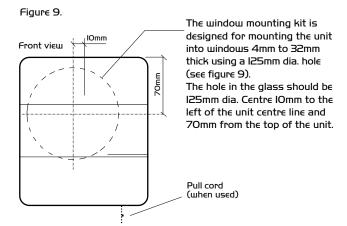


5. Using the three screws (and spacers fitting under the screw heads if required) locating with the threaded inserts in the outer assembly, draw the inner and outer assemblies together. Remove any tape supporting the outer assembly and continue to draw the units together until the rubber gaskets positively locate the unit on the window.

Note: do not over tight en the fixing screws as this may distort the assembly. Replace the shutters in the outer frame assembly.

**6.** Wire unit in accordance with the appropriate wiring diagram. A cable clamp is provided inside the case.


Note: the remaining installation procedures for Window Mounting are as Surface Mounting description.

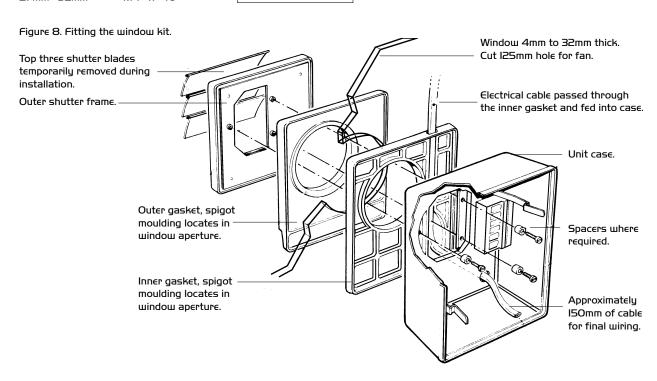

## 3.0 Genie-DC Commissioning a) Run-on-timer

Figure IOa. (X & XH variants) (S & H variants)

Figure 10b.

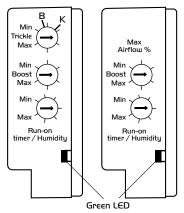

When installing a unit with run-on timer the adjuster should initially be turned fully anti-clockwise. (This equates to a run-on of approximately I minute). Isolate unit from supply and remove front cover. Locate the electronic control module situated to the right of the fan/motor assembly. Using a small screwdriver, turn the adjuster to the fully anticlockwise position. Adjustment to the timer can subsequently be made to suit individual preferences. Turn timer clockwise to increase run on time -

maximum run on time is 60 mins. Note: for units fitted with humidistat control (H variants) run-on timer is fixed at 15 minutes

## b) Genie humidistat set up instructions

Set humidistat to mid position (3 o'clock) when viewed as figure IO (approximately 60% RH). Switch mains power ON (note, switched live e.g. light switch, should be off and the pull cord should not be pulled). Under normal conditions the fan should be OFF. If the fan is ON and the green LED is on, turn adjustment clockwise until the liaht aoes out.

Note the green light is ON when humidity is being sensed or the switched live/pull cord is activated. If the fan is running and the green light is OFF the fan is in its run-on period.

## c) Speed control


All variants are fully speed controllable. 'S and H' variants are equipped with speed control for the boost function only. 'X and XH' variants are equipped with control of both trickle and boost speed.


#### IMPORTANT

Ensure boost speed is set higher than trickle speed setting

## 4.0 Genie-DCE Commissioning

  Figure II. (DCE variants)





Green LED

See 3b set up instructions for 'H' variants.

Referring to Fig. II the unit has two set points: B – setting for bathrooms, en-suit es, utility room.


K - Kitchens

Power Consumption 230V **PV** Unit input power (watts) 12 16 .085 Full load current (amps) .14 Starting Current (amps) .14 .085


#### IMPORTANT

 
Isolation -Before commencing work make sure the unit is electrically isolated from the mains and switched live supply. Means for double pole disconnection must be incorporated in the fixed wiring in accordance with the wiring regulations.


## 5.0 Wiring details



 The switched Live signal to terminal 2 must be at 230V to enable the fan and at OV to stop the fan after the adjustable timed over run period. Induced voltages in the switched live field wiring can keep the unit running.



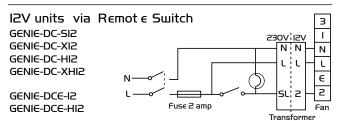

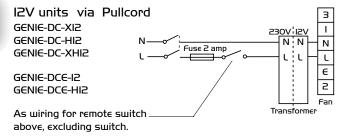

### IMPORTANT

I2V fan units must be installed in accor dance with these instructions and IEE Wiring Regulations BS7 671 for SELV installations.

#### Transformer Installation notes for wiring sizes

It is important to note that the size of wire used between the transformer and the fan unit can have an adverse effect on the units performance if the following table is not adherred to. Mains Supply: (230V)

## Transformer to fan (I2V units only)

Cable run (max.	10 metres) Cable size
Up to 2m	0.75mm sq.
Up to 4m	I.OOmm sq.
Up to 6m	I.50mm sq.
Up to IOm	2.50mm sq.

Isolation -Before commencing work make sure that the unit is electrically isolated from the mains and switched live supply.

#### IMPORTANT

I2V cables should not be fitted within 50mm of 230V cables or on the same metal cable tray/conduit.

# 6.0 Installation of Transformer Enclosure (I2 Volt units only)

The enclosure containing the transformer is intended to be mounted out of sight (e.g. in a loft, cupboard, under floorboards etc.). However, if this is not possible the transformer enclosure should be mounted as close to the ceiling, or as far from the "splash zone" as possible (see below for definition of the splash zone). As can be seen from the table of wiring sizes, it is advisable to place the enclosure as close to the fan as possible to reduce the costs of wiring and assist in installation.

#### 'Splash zone'

The 'Splash Zone' can be considered to be an area within a bathroom or shower room where a person using the bath or shower can effectively reach. An arms reach is defined as 0.6 metres from the edge of the bath or shower up to a height of 2.25 metres.


#### Procedure

- I. Remove two screws securing the cover and remove the cover.
- 2. Position the base enclosure on mounting surface and route cables through knockouts. Mark the fixing points on the mounting surface and secure using suitable fixings (by others).
- 3. Connect wiring as shown.
- 4. Replace cover.


Keep vents clear of obstruction.

Note: No earth is to be connected between transformer and fan.

#### Figure I2. I2V Transformer details.

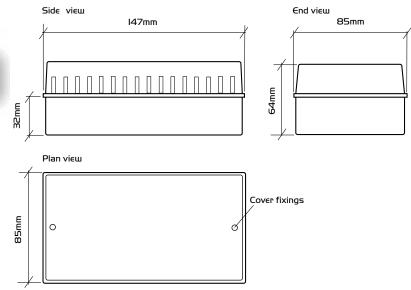

View inside with cover removed

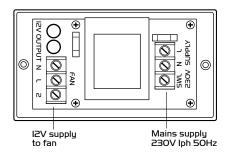

Note to installing electrician: To a void cable insulation contact with hot transformer, always use the knockout at PCB end.

#### **IMPORTANT**

I2V fan units must be installed in accordance with these instructions and IEE Wiring Regulations BS7 671 for SELV installations.

#### 7.0 Maintenance

#### General

A washable filter is fitted to protect the fan/motor assembly from towel lint, talc etc. and to prolong the life of the unit. However, some fine dust may find its way through the filter and could build up on the motor and/or impeller. It is therefore strongly recommended that all units are inspected and cleaned at least every six months.

#### Procedure

At all times take care not to damage, distort or disturb the balance of the impeller. Remove the filter and the electronic control module. Spring aside the two clips and remove the fan module Inspect and replace any damaged items.

Using a soft brush or dry cloth remove dust and dirt from the fan module. Wash front cover in warm soapy water and dry thoroughly. Re-fit fan and electronic control module, replace front cover and secure with screws. Wash filter on tepid water to which a little mild detergent has been added. Shake out excess water and allow to dry naturally. Replace filter. Refit the retaining screws (Fig 3). Test run the unit.

## Telephone 02920 858 400

## 8.0 Replacement of Parts

Should any component need replacing Nuaire keep extensive stocks for quick delivery. Ensure that the unit is electrically isolated, before carrying out any work.

When ordering spare parts, please quote the serial number of the unit and the ARC number of the purchase if possible.

(This information will be available on the fan label).

### 9.0 Warranty

The 5 year warranty starts from the day of delivery and includes parts and labour for the first year. The remaining period covers replacement parts only.

This warranty is void if the equipment is modified without authorisation, is incorrectly applied, misused, disassembled, or not installed, commissioned and maintained in accordance with the details contained in this manual and general good practice.


The product warranty applies to the UK mainland and in accordance with Clause I4 of our Conditions of Sale. Customers purchasing from outside of the UK should contact Nuaire International Sales office for further details.

## 10.0 After Sales Enquiries

For technical assistance or further product information, please contact the After Sales Department.

Technical or commercial considerations may, from time to time, make it necessary to alter the design, performance and dimensions of equipment and the right is reserved to make such changes without prior notice.

Figure I3. Genie-DC and DCE base drill pattern.

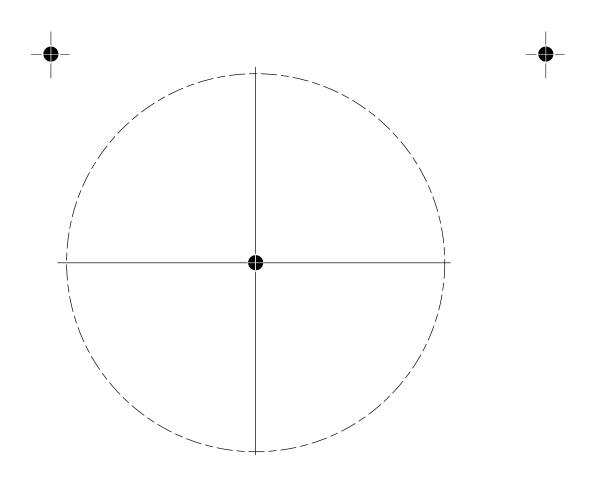



Western Industrial Estate Caerphilly United Kingdom CF83 INA T: 029 2088 5911

F: 029 2088 7033

€: info@nuaire.co.uk

W: шшш.nuaire.co.uk

